

INITIAL INSTALLATION INSTRUCTION

1 **Warning:** The automatic machine may be operated by the qualified personnel only.

2 **Unpacking**

Cut protecting foil with caution and remove transport protection. Remove keys from Coin Return inlet.


3 **Assambling**

The automatic machine must not be installed near intensive heat sources or water sprinklers. The automatic is designed for indoor operation only.

In order to ensure a proper circulation, areas of air change shall be left free (front and back of the machine). A distance between the machine and a wall shall not be less than 10 cm. It is recommended to apply the bracket (placed in the product release drawer).

The machine should be properly levelled. The lower machine feet should be used for that. The real machine dimensions (door opened, easy access) should be taken into consideration in planning distributor layout.

Failure to comply with this provisions may result in malfunction and damage to the automatic machine.

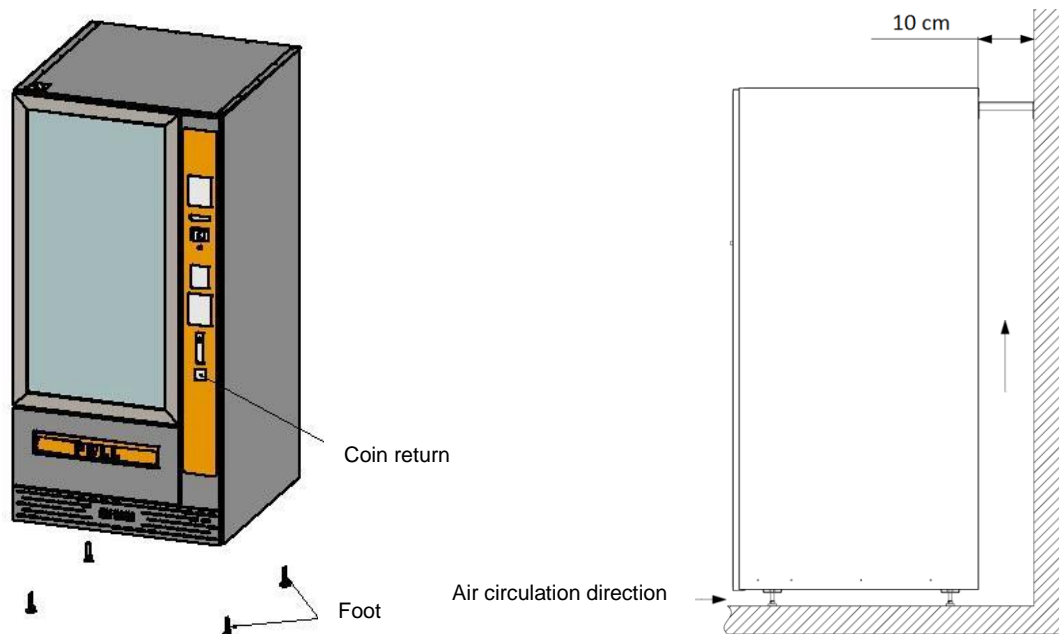

4 **Power supply**

Before making the electricity connection we need to ensure that the electrical installation ,the machine will be connected to, is 230V, properly grounded and rated capacity of a socket is not less than 10A.

5 **Test and inspection of the automatic machine**

Completeness of the automatic machine equipment shall be verified. Tests for systems ie. motors, photocell, display and keyboard shall be performer (see service manual).